


## RX60/RX80/RX120/RX140 Power Factor Regulator User Guide

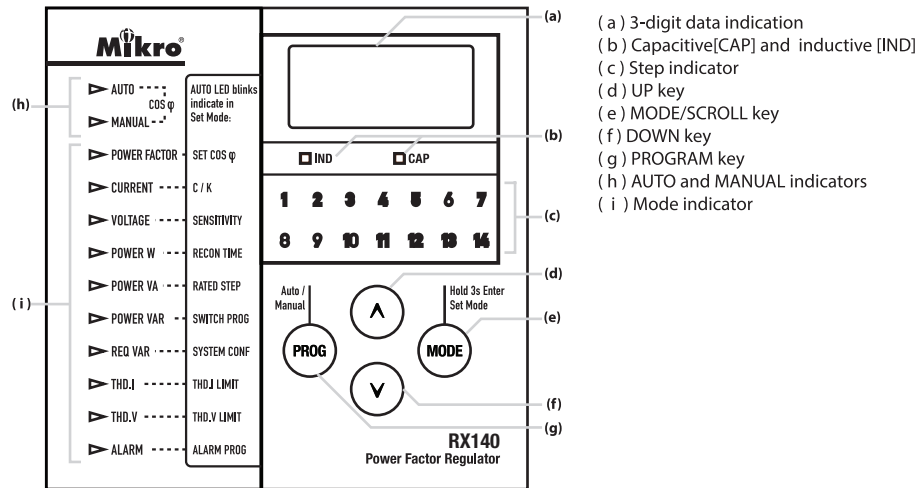


### Features

- Microprocessor based intelligent auto switching control
- Display of Cos  $\Phi$ , power factor, voltage, current and total harmonic distortion voltage/current
- Display power of Active (W), Reactive (var), Apparent (VA) and required var
- No voltage release function
- Automatic C/K and rated step adjustment
- Automatic CT polarity correction
- Programmable sensitivity
- Programmable alarm
- Last step can be used as alarm/fan output
- Alarm of Under/over voltage, under/over compensate, step fault and high harmonic distortion
- Complies with IEC 61000-6-2 standard


### Switching Program

OFF	Switching operation is Off, only measurement is operating.
Manual switching (n-A)	Capacitor steps are controlled manually by the "UP" or "DOWN" keys. Steps are switched in a rotational manner based on first-in-first-out basis
Rotational switching (rot)	It is automatically switch in and out the capacitors according to the targeted power factor, sensitivity and reconnection time. Steps are switched in a rotational manner based on first-in-first-out basis
Automatic switching (Aut)	This automatic switching program uses intelligent switching sequence. The step switching sequence is not fixed and the program automatically select the most appropriate steps to switch in or out in order to achieve shortest reaction time with minimum number of steps. For equal ageing of the capacitor and contractors, the program will select the least used step to be switched in if there are two equally rated steps. Under this switching program, the power factor regulator automatically detects the CT polarity.
Four-quadrant switching (Fqr)	This switching program is similar to the automatic switching program (AUT) except that this switching program allows the power factor regulator to operate correctly under both import power and export power (re-generative) conditions. [Make sure CT polarity is correctly wired when using this program]

### Connection Diagram

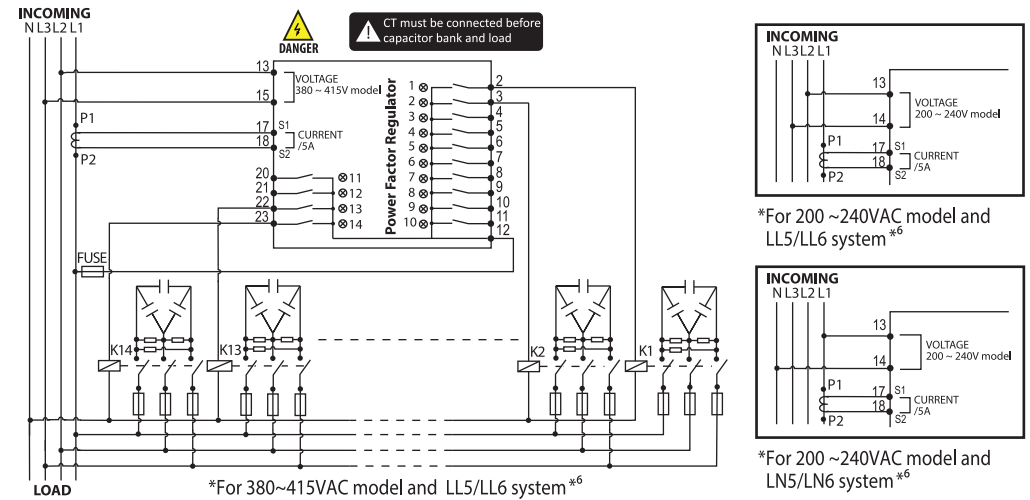

### Case Dimensions

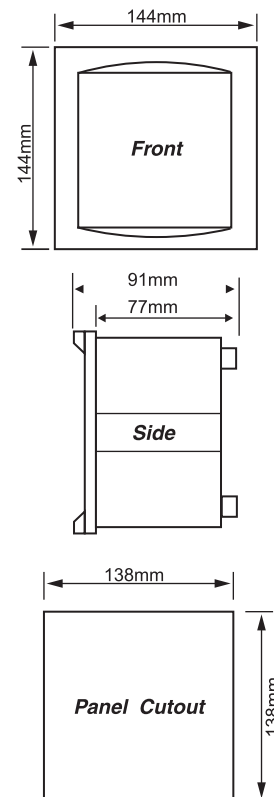

### Technical Data

#### Auxiliary Supply

Supply Voltage..... 200~240 VAC/380~415VAC  
Operating Limits..... -15% +10%  
VA Rating..... 10VA max  
Frequency..... 50Hz or 60Hz

#### Current Input

Rated current, In..... 5A  
Operatings Limits..... 0.02 - 8A  
Rated Frequency..... 50Hz or 60Hz

#### Output Contacts

Numbers of Outputs..... 6/8/12/14 (PFR60/PFR80/  
PFR120/PFR140)  
Contact Arrangement..... NO contact type  
Rated Capacity..... 5A 250VAC(Cos $\Phi$ =1)  
Max Current for the Common..... 12A continuous  
Terminals

#### Control Range

Power Factor Setting..... 0.8 inductive - 0.8 capacitive  
C/K Setting..... 0.02 - 1.20/ Auto  
Switching Sensitivity..... 5 - 600 s/step  
Reconnection Time for..... 5 - 240 s  
Same Step  
THD Current Threshold..... 20 - 300%  
THD Voltage Threshold..... 20 - 30%  
Switching Program..... Off/Automatic/Rotational/  
Manual/Four-quadrant  
Rated Step Coefficient..... 1 - 16/Fix/Off

#### Mechanical

Mounting..... Panel mounting  
Dimension (mm) ..... 144(w) x 144(h) x 91(d)  
Enclosure Protection..... IP54 at the panel  
Approximate Weight..... 1kg



Switch between Manual or Auto Mode	Press and hold "PROG" key for 3 seconds on COSΦ mode
Programming Lock/Unlock	On COSΦ mode, press and hold "PROG" and "DOWN" keys simultaneously until data indication flash "Loc" or "CLr". "Loc" indicates programming locked and "CLr" indicates programming unlock.
Factory default reset	First power off the device, press "UP" and "DOWN" keys simultaneously while turning on the power and holds it for more than 5 seconds until data indication flashes "dEF"
Scroll alarm message	On Alarm mode, press "UP" or "DOWN" key
Scroll step number	On Rated Step mode, press "UP" or "DOWN" key
Step In/Out on manual switch	On COSΦ mode, press "UP" to step in or Press "DOWN" to step out

Alarm flashing	Alarm conditions detected
Step number flashing	Waiting reconnection time ready to step in
AUTO LED On	Device is running in auto switch mode
MANUAL LED On	Device is running in manual switch mode

Control parameter	Indication LED	Step LED <sup>1)</sup>	Setting Range	Default factory setting
Target power factor	SET COS $\varphi$		0.80 Ind - 0.80 Cap	0.98Ind
C/K	C/K		0.02 - 1.20/Atc	Atc
Sensitivity	SENSITIVITY		5 - 600 s/step	45 s/step
Reconnection time	RECON TIME		5 - 240 s	30 s
Rated step 1 Rated step 2 ⋮ Rated step X <sup>2)</sup>	RATED STEP	1	001 - 016 / OFF FiS - Fix output ALA <sup>3)</sup> - alarm output FAn <sup>4)</sup> - fan output	001
Switch program	SWITCH PROG		OFF, n-A, rot, Aut, Fqr	Aut
System configuration	SYSTEM CONF		LL5, LL6, LN5, LN6 <sup>6)</sup>	LL5
THD current limit	THD.I Limit		0.20 - 3.00	0.50
THD voltage limit	THD.V Limit		0.20 - 0.30	0.20
Alarm program <sup>5)</sup>	ALARM PROG		000 - FFF <sub>h</sub>	FFF <sub>h</sub>

- \*1 - Under normal operation except for rated step display, the step indicator indicate step ON/OFF status
- \*2 - Number of steps depend on model
- \*3 - Only last output can be configured as alarm output
- \*4 - Last output can be configured as fan output, or second last output can be configured as fan output only when last output is configured as alarm output
- \*5 - Refers figure 1 for alarm program configuration
- \*6 - LL5 is phase to phase 50Hz system, LL6 is phase to phase 60Hz system, LN5 is phase to neutral 50Hz system and LN6 is phase to neutral 60Hz system

Alarm Message	Description	Delay time		Action
		Activate	Deactivate	
Lol	Current lower than 0.02A	10 s	5 s	-
Hil	Current exceed than 5.50A	2 min	1 min	-
LoU	Voltage lower than 295VAC <sup>*8</sup>	100 ms	5 s	<sup>*7</sup> All steps disconnected
HiU	Voltage exceed 456 VAC <sup>*8</sup>	15 mins	7.5 mins	-
Uco	All capacitors are connected and the power factor lower than COS $\varphi$	15 mins	7.5 mins	-
Oco	All capacitors are disconnected and the power factor higher than COS $\varphi$	15 mins	7.5 mins	-
Est	Auto C/K or rated step measurement error. Manual setting required	-	-	-
SFt	Faulty step. Whereas "FLt" will be shown in rate step mode for the step is faulty	-	-	-
UnS	Target cannot be reached due to CK value too high	-	-	-
OUS	Target cannot be reached due to not suitable step size	-	-	-
tHI	Current THD exceed set THD.I limit	5 mins	2.5mins	<sup>*7</sup> All steps disconnected
tHU	Voltage THD exceed set THD.V limit	5 mins	2.5mins	<sup>*7</sup> All steps disconnected
ECt	Automatic CT polarity detection error	-	-	-

REMARKS : When alarm is deactivate ( LoU/Lol ), the relay will operate as normal

## Digit3 Digit2 Digit1




Figure 1: Link element in Hexadecimal value  
0= Disable,  
1= Enable

[illegible][illegible]

	Digit3				Digit2				Digit1			
User's setting												
User's setting hexadecimal value												